

# TRIGON JSEP AND SKEP SAFETY TIP OF THE WEEK

Date: 17 November 2019

Tip # 003

FROM: Engr. Odai Tawalbeh

SUBJECT: **SCAFFOLDING SAFETY**

**Health & Safety Issue:** In continuation with the Trigon TARGET ZERO initiative; this Safety Tip is for your immediate consideration on our JSEP and SKEP projects. **Scaffolding** has become a contentious issue lately on many Trigon monthly and weekly observation visits; identifying unacceptable standards applied throughout the works. You are kindly requested to remain extra vigilant when inspecting scaffolding erected by the Construction Contractors and ensure the preventative actions described below are fulfilled.

### Preventative Measures

- Ensure that only competent personnel carry out the erecting and dismantling of all scaffolds;
- All completed scaffolds must be officially handed over before any work at height commences;
- Edge protection and access arrangements must be compliant to reputable standards i.e. NASC;
- Full training shall be given to all operatives demonstrating the double lanyard system;
- Ensure that only scaffold boards of 600mm (no less) be used as working platforms;
- All scaffolds must display a current tagging system showing the last date of inspection; and
- All loading platforms should be marked with a clear 'safe working load' (SWL) sign.


Please facilitate this information to all contractors via TBT.

For a general discussion on scaffolding safety see:

<https://www.osha.gov/SLTC/scaffolding/construction.html>



Provide adequate support for planks. Guardrails installed. Fully planked platform.

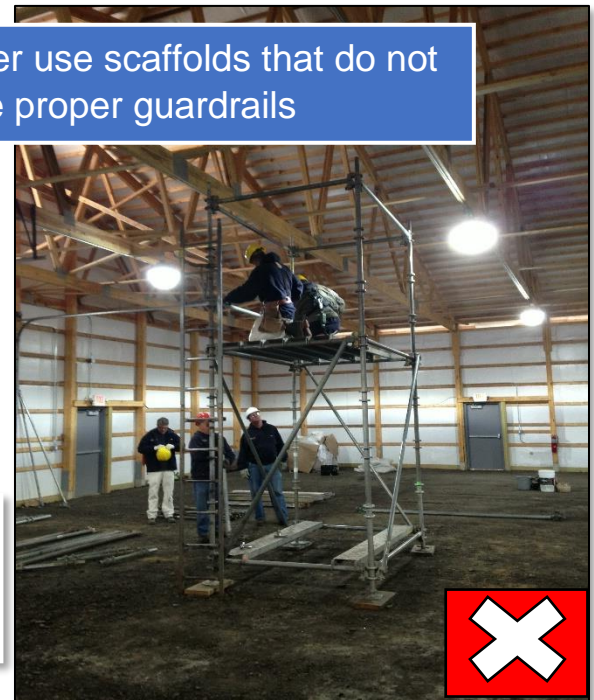

Never use scaffolds that do not have proper guardrails

# TRIGON JSEP AND SKEP SAFETY TIP OF THE WEEK

نصيحة رقم 3

التاريخ: 17 تشرين الثاني 2019

من: المهندس عدي طوالبه

الموضوع: **سلامة السقالات**

**مشكلة الصحة والسلامة:** استمراراً لمبادرة Trigon وهي "العمل من غير حوادث"، فإن نصيحة الأمان هذه هي للتنفيذ الفوري لمشاريعكم. لقد أصبحت السقالات قضية مثيرة للجدل في الأونة الأخيرة مع العديد من عمليات التفتيش الشهري والأسبوعي لتحديد المعايير السيئة المطبقة في مشاريعنا. يرجى منكم أن تظنوا يقظين للغاية عند فحص السقالات التي أقامها المقاولون والتأكد من استيفاء الإجراءات الوقائية الموضحة أدناه.

### تدابير وقائية:

- تأكد من أن الموظفين الأكفاء هم وحدهم الذين ينفذون تركيب جميع السقالات وتفكيكها.
  - يجب تسليم جميع السقالات المكتملة رسمياً قبل بدء أي عمل في ظروف الارتفاعات.
  - يجب أن تكون حماية الحواف وترتيبات الوصول متوافقة مع المعايير ذات السمعة الطيبة.
  - يجب توفير تدريب كامل لجميع العاملين حول كيفية استخدام نظام الحماية من السقوط.
  - تأكد من أن ألواح السقالات 600 مم هي فقط التي يجب استخدامها كنظام عمل على السقالات.
  - يجب أن تعرض كل سقالة نظام علامات يشير إلى حالة السقالة و آخر تاريخ للتفتيش.
  - يجب تزويد جميع وحدات المنصات بعلامات توضح "الوزن الأمان للسقالة".
- يرجى تسهيل ايصال هذه المعلومات إلى جميع المقاولين عبر محادثات التدريب اللازمة.

للاطلاع على مناقشة عامة حول سلامة السقالات، انظر:

<https://www.osha.gov/SLTC/scaffolding/construction.html>



الدعم المناسب. وحدة المنصة مغطاة بالكامل مع وجود نظام حماية جانبي.

لا تستخدم السقالات غير المزودة بنظام الحماية الجانبي

